



## PLUG AND PLAY SISSY BAR MOUNT for VT 1300

## 1607

### PARTS INCLUDED

- 1 Plug-n-Play Sissy Bar Mount
- 1 Rubber Pad
- 1 Hardware Kit Including
  - 1 M6 X 1.0 X 25mm Button Socket Cap Screw
  - 1 M6 Wide Flat Washer
  - 1 M6 Flat Washer
  - 1 M6 Hex Nut
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING!** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

**CAUTION!** This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

### TOOLS SUGGESTED

Set of Hex Wrenches, Combination Wrenches, Socket Set and Ratchet, Drill Bits, Drill, Masking Tape.

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**ATTENTION!** This procedure requires making permanent modifications to the fender; this may void your warranty. Consult your dealer for more information.

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.
- STEP 2** Remove the adhesive backing from the rubber pad, and install the pad on the bottom of the mount, making sure to line the holes in the mount up with the holes in the pad.
- STEP 3** Remove the seat from the motorcycle and clean the fender.
- STEP 4** Place the mount on the fender and determine the mounting location. You will use the seat mounting screw as the rear fastener for the mount. The hole for the front fastener will need to be drilled. Remove the mount and place masking tape over the fender in the location of the front holes on the mount. PIC 1

### CUSTOMER SERVICE

877.370.3604 (toll free)

### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
  - The product must be properly installed, maintained and operated under normal conditions.
  - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
  - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge.

Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025.

Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



**CAUTION!** **MEASURE TWICE – DRILL ONCE.** Double check all reference marks made on the Rear Fender **BEFORE** drilling. Kuryakyn will not be responsible for incidental or consequential damages resulting from this installation.

**CAUTION!** To minimize the possibility of damage to the paint we recommend the use of masking tape and a sharp drill bit.

**STEP 5** Set the mount back on the bike, lining up the rear of the mount with the seat screw. Mark the upper most pair of holes in the front of the backbone of the mount on the masking tape. PIC 1 This hole will be approximately 11-1/4" from the frame (PIC 2) or 9-1/4" from the rear seat screw. PIC 3

**NOTE:** There is a metal support strap, that is approximately 1-1/2" wide, under the fender that this hole needs to go through. Once the hole location has been marked, determine that you will be drilling through the fender and this support strap. (approximate location of strap shown in PIC 2 and PIC 3)

**STEP 6** Carefully drill a hole in the marked location using a 17/64" drill bit. **Be careful not to drill into the tire.**

**CAUTION!** Ensure that the area below the fender is clear before drilling. Be careful not to drill into the tire or any concealed wiring!

**STEP 7** Carefully remove the tape from the fender. Thoroughly clean the fender to remove any metal shavings and/or dust, dirt or grime to prevent damage to the paint.

**STEP 8** Place the mount on the on the fender and secure the front of the mount using the Wide M6 Flat Washer under the head of the Button Socket Cap Screw and the M6 Flat Washer and Hex Nut under the fender support strap. PIC 4

**CAUTION!** Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.



**STEP 9** Install a sissy bar that is no more then ten (10) inches (not included) and secure to the bracket. Install the seat. Tighten all hardware.

**WARNING!** DO NOT EXCEED 10" HEIGHT RESTRICTION-USE OF TALLER Sissy BARS MAY RESULT IN FENDER DAMAGE, SERIOUS INJURY OR DEATH.

**WARNING!** Sissy BARS ARE NOT A SAFETY RESTRAINING DEVICE. FAILURE TO HOLD ONTO THE MOTORCYCLE MAY RESULT IN INJURY OR DEATH.

**WARNING!** IMPROPER INSTALLATION OR USE OF THIS PRODUCT COULD RESULT IN SERIOUS INJURY OR DEATH.

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

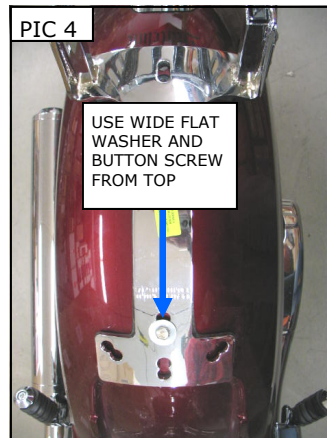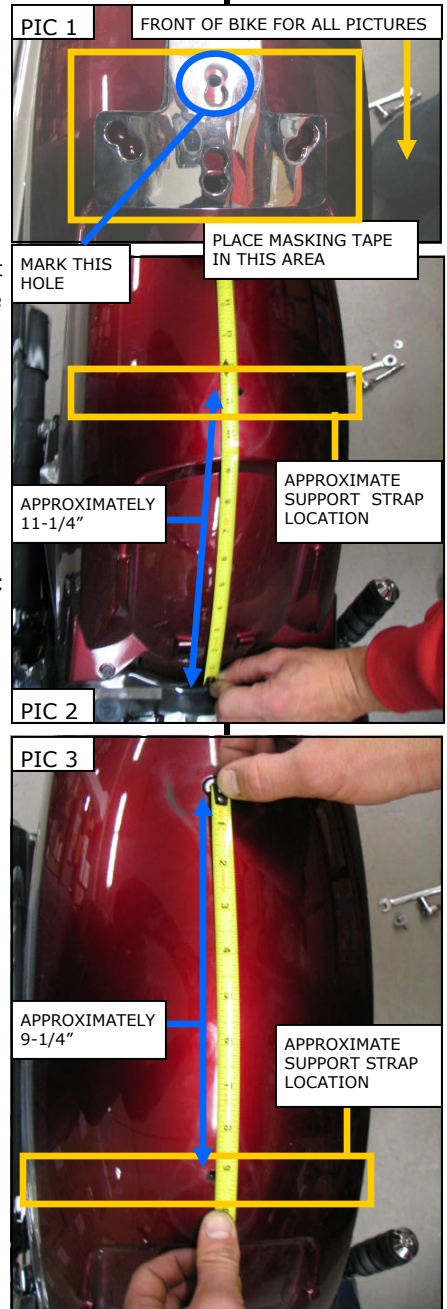

*Ride On!*