



FLAMED FLOORBOARD COVERS 7025

FITS: THIS PRODUCT ONLY INSTALLS OVER OEM FACTORY FLOORBOARDS.
YAMAHA: '99-UP V-STAR 1100, '07-UP V-STAR 1300, '99-UP ROAD STAR 1600/1700 (EX. WARRIOR)
KAWASAKI: '03-UP VULCAN 1600 CLASSIC, '04-UP VULCAN 2000, VULCAN 800 AND 1500, INCLUDING CLASSIC, NOMAD AND DRIFTER, '07-UP VULCAN 900 CLASSIC
SUZUKI: '05-UP BOULEVARD C90 AND C50
VICTORY: ALL VICTORY OEM FACTORY DRIVER FLOORBOARDS
NOTE: KAWASAKI VULCAN 900 CLASSIC AND SUZUKI C90 & C50 WILL NOT ACCEPT KÜRYAKYN HEEL SHIFT COVER (P/N 4029).

PARTS INCLUDED

- 1 Right Floorboard Cover
- 1 Left Floorboard Cover
- 1 Hardware Kit, including:
 - 6 1/4-20 x 1/2 Button Socket Cap Screw (BSCS)
 - 6 1/4-20 x 3/4 BSCS
 - 6 #10-24 x 3/4 BSCS
 - 8 #10 Flat Washer
 - 6 1/4 Flat Washer
 - 2 Curb Feeler
- 1 Installation Instructions

*Not all of the included parts will be used during this installation.
 Please read and understand entire instructions before starting installation.*

THANK YOU FOR CHOOSING KÜRYAKYN!

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

- WARNING!** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.
- WARNING!** IMPROPER INSTALLATION OR USE OF THIS PRODUCT COULD RESULT IN SERIOUS INJURY OR DEATH.
- CAUTION!** This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.
- CAUTION!** Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.
- ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.
- ATTENTION!** It is the installer's responsibility to ensure all fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

-cont.-

CUSTOMER SERVICE
 877.370.3604 (toll free)

INSTALLATION QUESTIONS
 techsupport@kuryakyn.com
 or call 715.247.2983

LIMITED WARRANTY
 Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



TOOLS SUGGESTED

Set of hex wrenches, combination wrenches or socket set and ratchet

PROCEDURE

STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

STEP 2 Remove the stock rubber inserts from your stock floorboards; set them aside, they will not be re-used.

NOTE Depending on the make and model of your motorcycle, you will need to remove fasteners or pull the rubber inserts off the stock floorboards.

STEP 3 From the chart below, determine the fasteners you will need for your specific model:

MAKE	(QTY PER SIDE) FASTENER	(QTY) WASHER
Yamaha Road Star and V-Star	(3) 1/4-20 x 1/2 BSCS	(3) 1/4 flat washers per board
Kawasaki Vulcan 900, 1600 and 2000	(2) 1/4-20 x 1/2 BSCS	(2) 1/4 flat washers per board
Kawasaki Vulcan 800 and 1500	(3) #10-24 x 3/4 BSCS	(3) #10 flat washers per board
Suzuki C90	(2) 1/4-20 x 1/2 BSCS	(2) 1/4 flat washer per board
Suzuki C50	(3) 1/4-20 x 1/2 BSCS	(3) 1/4 flat washer per board
Victory	(3) 1/4-20 x 3/4 BSCS	(3) 1/4 flat washer per board

STEP 4 Position the Flamed Floorboard Covers over the stock floorboards; the inboard edge of the new covers should be within a 1/16" of the inboard side of the stock floorboards. See FIG.1.

STEP 5 Align the holes in the stock floorboards with the threaded holes in the new covers.

STEP 6 Install the correct fasteners (from STEP 3 and the above chart) through the stock floorboards and into the new covers; do not tighten the fasteners until they are all installed.


STEP 7 Ensure proper clearance and operation before riding the motorcycle.

NOTE Adjustment of the Shifter lever and/or Brake lever may be necessary on some applications. Refer to your specific model service manual for more information.

Ride On!

Kuryakyn

FIG.1

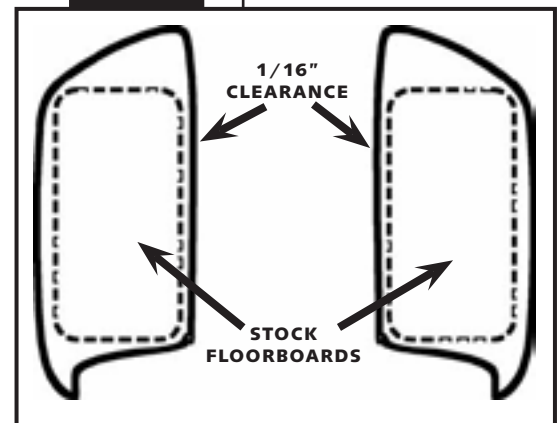

PAGE

2